



## **Is there an easy way to support the non-VGA system with Vortex86SX?**

Yes, you can use Console Redirection through COM port and use your PC to monitor this non-VGA system. To use this, you should enable the "Remote Access Control" and choice the properly COM setting (115200, n, 8, 1). On your PC side, you should open the "Hyper Terminal" with properly setting (115200, n, 8, 1). Then you can easy change the BIOS setting and update the software on this non-VGA Vortex86 system from your PC.