



Where and how can we install the BIOS in Vortex86SX?

Internally there is a 256KB SPI flash for the BIOS storage, it should be installed by the JTAG interface for the first time, and it can be re-programmed by software from the second time. DMP also provides the service to pre-install the AMI BIOS before delivery. You can use external flash as the BIOS storage; for example, SST 39SF020-90-4C-PH. Please pull-down the Hardware Strap MA12 and MA13 to enable the external BIOS flash.