

Start Guide

OrientalMotor AZ-mini EtherCAT
SubDevice (PP mode) with 86EVA



86Duino Coding IDE 501

EtherCAT Library

(Version 2.0)

Revision


Date	Version	Description
2024/9/9	Version1.0	New Release.
2025/4/7	Version1.1	<ul style="list-style-type: none">Use 86Duino IDE 501 Control.Change Main-device to MDevice, and Sub-device or Slave to SubDevice

Preface

In this guide, we will show you how to use the EtherCAT MDevice QEC-M-01 and OrientalMotor AZ-mini EtherCAT SubDevice.

Notes QEC’s PoE (Power over Ethernet)

In QEC product installations, users can easily distinguish between PoE and non-PoE: if the RJ45 house is red, it is PoE type, and if the RJ45 house is black, it is non-PoE type.

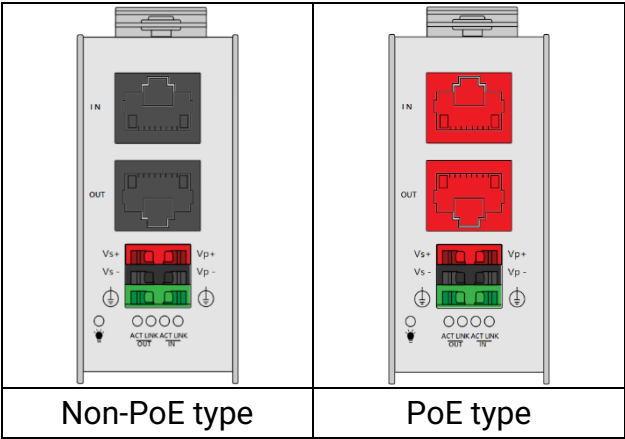

PoE (Power over Ethernet) is a function that delivers power over the network. QEC can be equipped with an optional PoE function to reduce cabling. In practice, PoE is selected based on system equipment, so please pay attention to the following points while evaluating and testing:

- 1. The PoE function of QEC is different and incompatible with EtherCAT P, and the PoE function of QEC is based on PoE Type B, and the pin functions are as follows:




- 2. When connecting PoE and non-PoE devices, make sure to disconnect Ethernet cables at pins 4, 5, 7, and 8 (e.g., when a PoE-supported QEC EtherCAT MDevice connects with a third-party EtherCAT SubDevice).
- 3. QEC’s PoE power supply is up to 24V/3A.

1. Connection and wiring hardware

The following devices are used here:

1. QEC-M-01 (EtherCAT MDevice)
2. AZD-KRED, AZ Series mini EtherCAT Driver (OrientalMotor Step-Servo Driver)
3. AZM48AK, 1.65 in. (42 mm) AZ Series Stepper Motor with Absolute Mechanical Encoder (DC Input)
4. 24V power supply

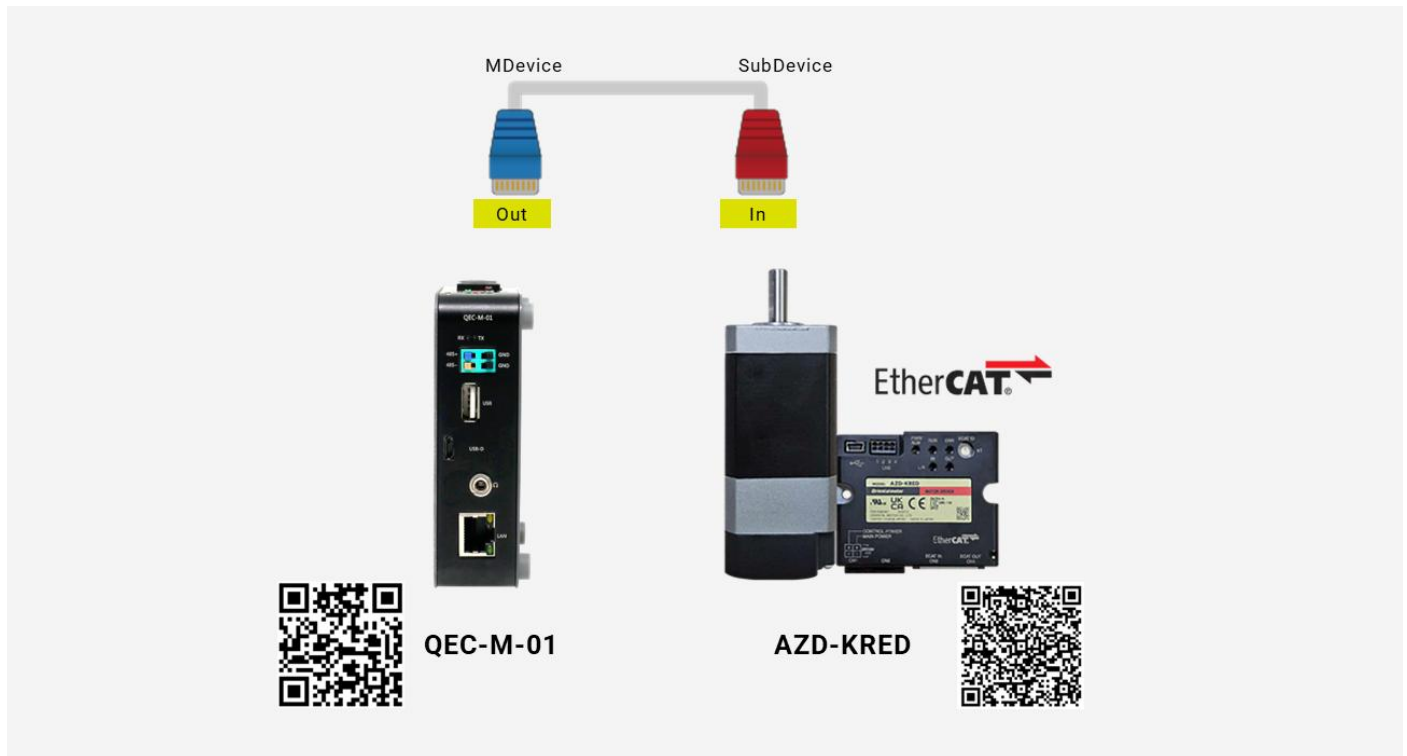

1.1 QEC-M-01


QEC EtherCAT MDevice.

1. Power Supply:

Connect to Vs+/Vs- and Vp+/Vp- power supplies via EU terminals for 24V power.

2. EtherCAT Connection:


Using the EtherCAT Out port (On the top side) connected to the EtherCAT In port of AZD-KRED via RJ45 cable.

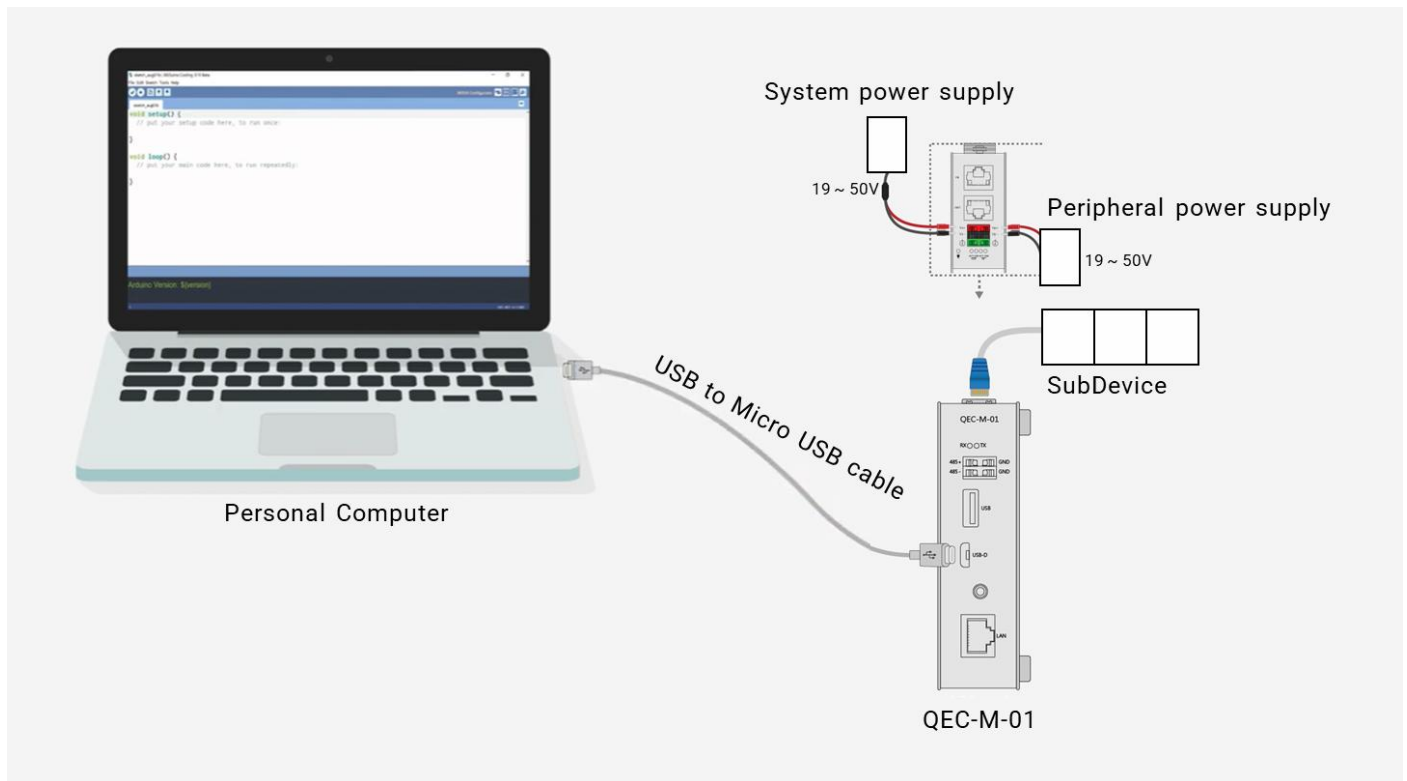

1.2 AZD-KRED

AZD-KRED, an AZ Series mini EtherCAT Driver (OrientalMotor Step-Servo Driver).

This figure shows an example when the **AZM48AK** motor is connected.

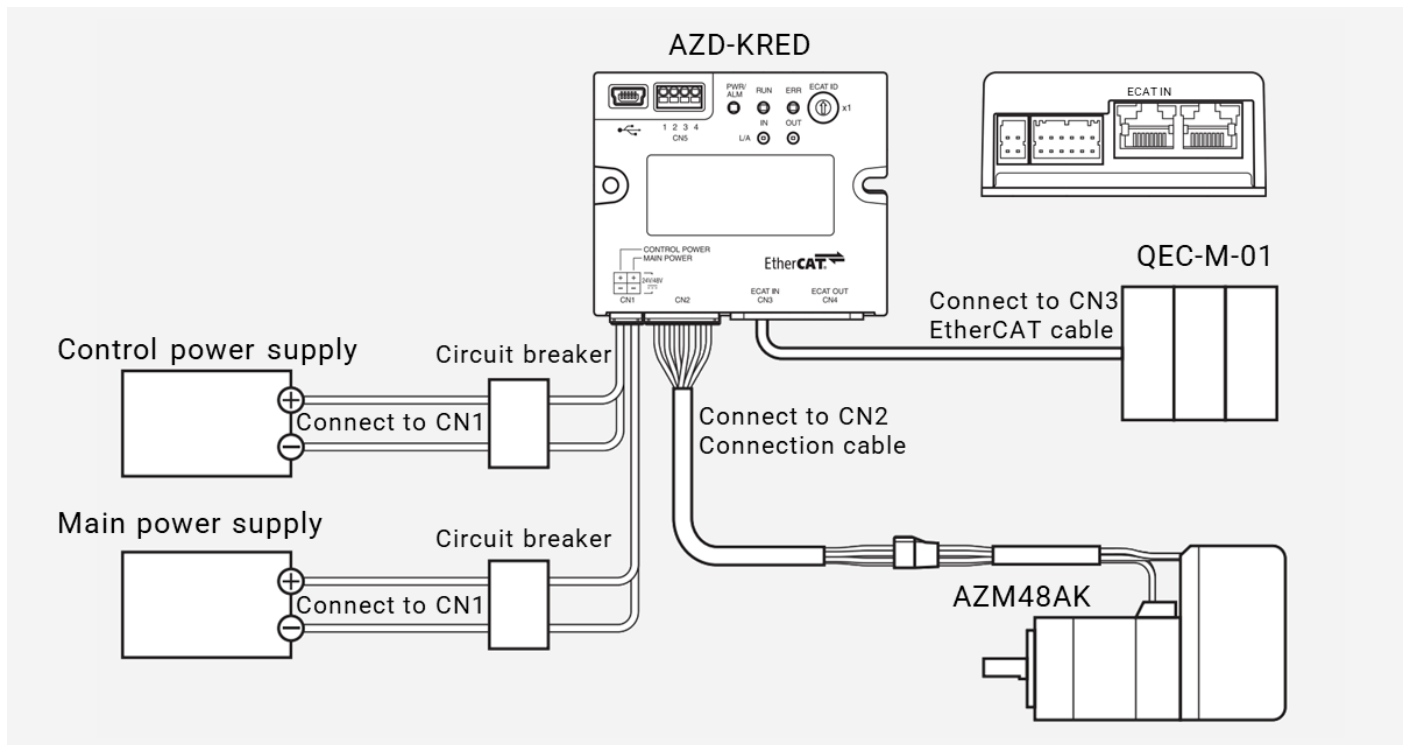

1. It is an OrientalMotor cable. Purchase is required separately.
2. Connecting the control power supply allows you to continue monitoring even if the main power supply is shut off. Connect it as necessary.
3. It is recommended that a circuit breaker or a circuit protector is connected because incorrect wiring may cause the internal input circuit to short-circuit.

Note

- Connect the connectors securely. Insecure connections may cause malfunction or damage to the motor or the driver.
- When connecting the cables, secure them so that no load is applied to the connectors. Applying a load to the connector may result in a connection failure, causing the driver to malfunction.
- Keep **10 m (32.8 ft.)** or less for the wiring distance between a motor and a driver. Exceeding **10 m (32.8 ft.)** in the wiring distance may result in an increase of the electrical noise emitted from the driver.
- Keep **2 m (6.6 ft.)** or less for the cable length of the main power supply and control power supply.

Memo


- Before connecting or disconnecting a connector, turn off the main power supply and the control power supply, and check the **PWR/ALM LED** has been turned off.
- When disconnecting the connector, pull out while pressing the latches on the connector with fingers.

Node Address Configuration for AZ-mini Driver:

The node address can be set using the **ECAT ID ×1** switch. The switch allows configuration of node addresses ranging from 0 to 15 in hexadecimal.

- The **node address switch** can be set to 16 steps, where addresses 0 to 15 correspond to hexadecimal values 0x0 to 0xF.
- When connecting multiple devices in the EtherCAT network, ensure that no two devices have the same node address to avoid conflicts.

Initial Shipment Setting: 0 (×1:0)

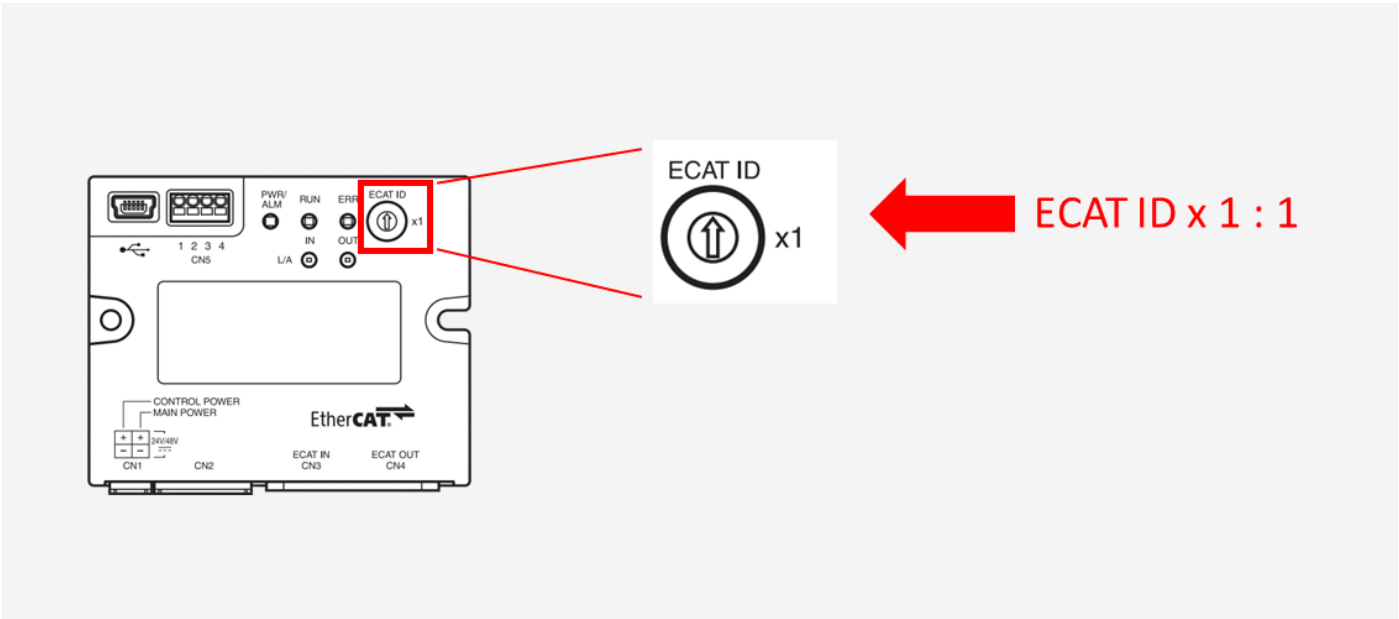


Setting Range	Description
0 (00h)	The MDevice’s settings will be applied.
1-15 (01h-0Fh)	The driver's settings will be applied.

Note:

When adjusting the switch settings, ensure that both the main power and control power are turned off. The settings will not take effect if the switch is adjusted while the power is still on.

2. Software/Development Environment

Download 86duino IDE from <https://www.qec.tw/software/>.

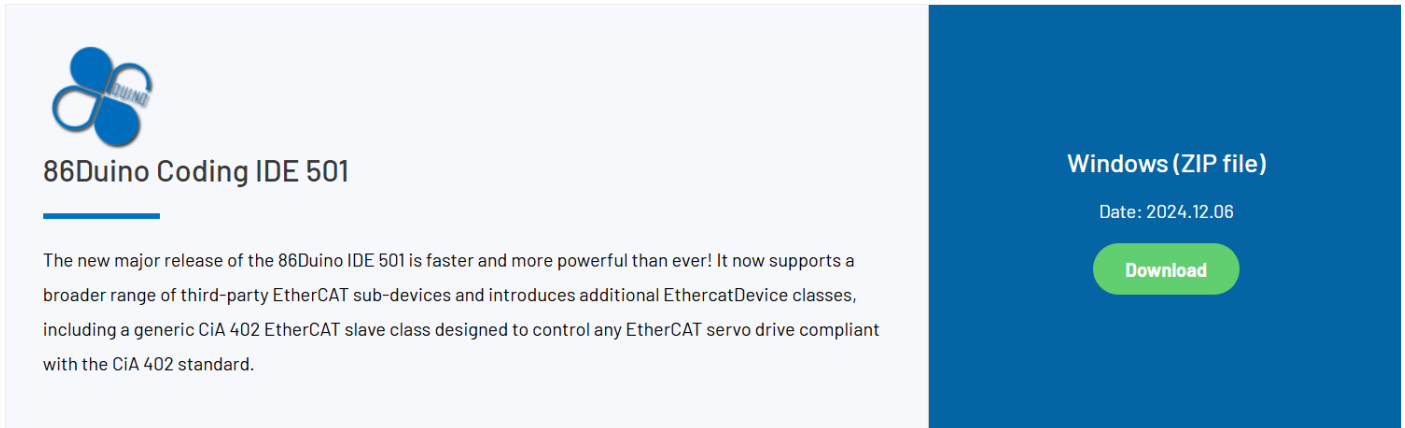

The image shows the 86Duino Coding IDE 501 download page. On the left, there is a logo and the title "86Duino Coding IDE 501". Below the title, a paragraph describes the new major release, stating it is faster and more powerful, supporting a broader range of third-party EtherCAT sub-devices and introducing additional EthercatDevice classes, including a generic CiA 402 EtherCAT slave class. On the right, there is a blue sidebar with the text "Windows (ZIP file)", the date "Date: 2024.12.06", and a green "Download" button.

After downloading, please unzip the downloaded zip file, no additional software installation is required, just double-click 86duino.exe to start the IDE.



Note:

If Windows displays a warning, click Details once and then click the Continue Run button once.


86Duino Coding IDE 501+ looks like below.





3. Connect to PC and set up the environment

Follow the steps below to set up the environment:

1. Connect the QEC-M-01 to your PC via a Micro USB to USB cable (86Duino IDE installed).
2. Turn on the QEC power.
3. Open "Device Manager" (select in the menu after pressing Win+X) -> "Ports (COM & LPT)" in your PC and expand the ports; you should see that the "Prolific PL2303GC USB Serial COM Port (COMx)" is detected; if not, you will need to install the required drivers.
(For Windows PL2303 driver, you can download [here](#))

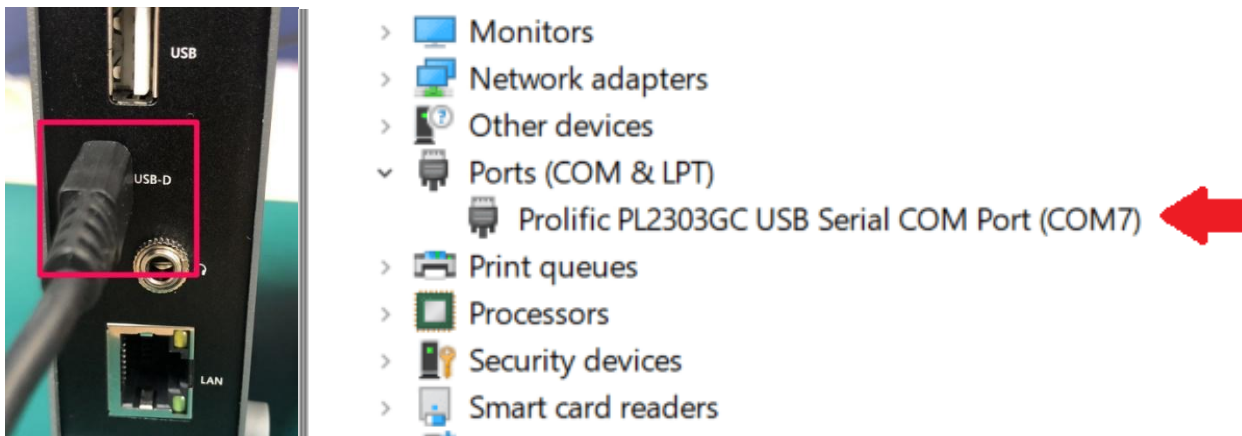

4. Open the 86Duino IDE.
5. Select the correct board: In the IDE's menu, select Tools> Board > QEC-M-01 (or the QEC MDevice model you use).
6. Select Port: In the IDE's menu, select Tools > Port and select the USB port to connect to the QEC MDevice (in this case, COM9 (QEC)).

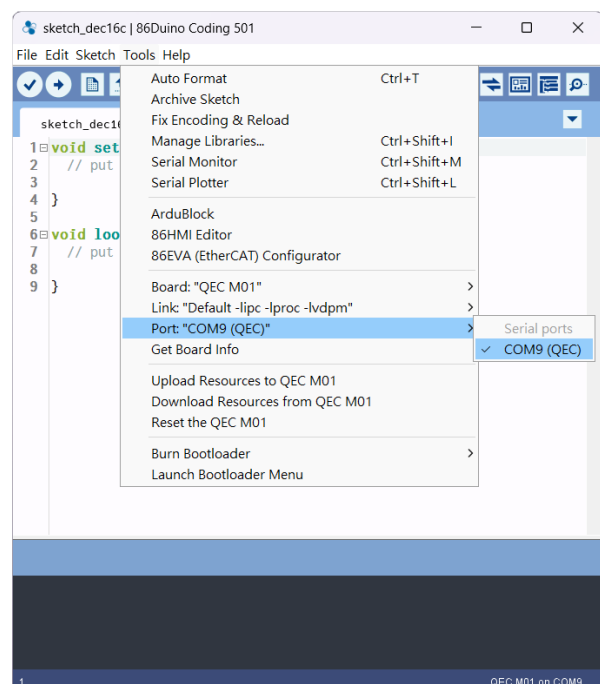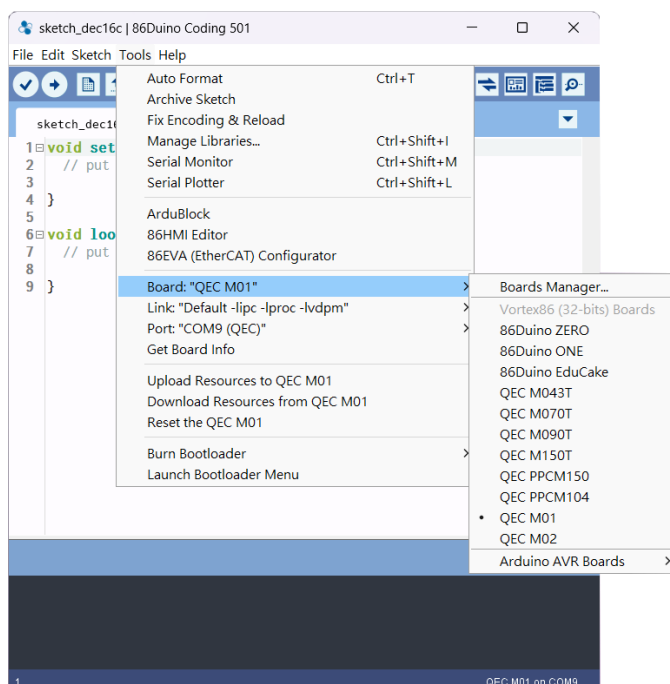

4. Use 86EVA with code

This example shows how to operate the EtherCAT MDevice (QEC-M-01) and the OrientalMotor AZ-mini EtherCAT Driver through the 86Duino IDE's graphical low-code programming tool, 86EVA.


Software Tools Description:

- 86EVA (EVA, EtherCAT-Based Virtual Arduino):
is a graphical EtherCAT configuration tool based on the EtherCAT Library in the 86Duino IDE and is one of the development kits for 86Duino.

This program sets the AZ-mini driver to CiA402 Profile Position (PP) mode. We'll read the AZ-mini motor position, and controls the motor by updating its target position based on its operational state.

Step 1: Turn on 86EVA and scan

The 86EVA tool can be opened via the following buttons.

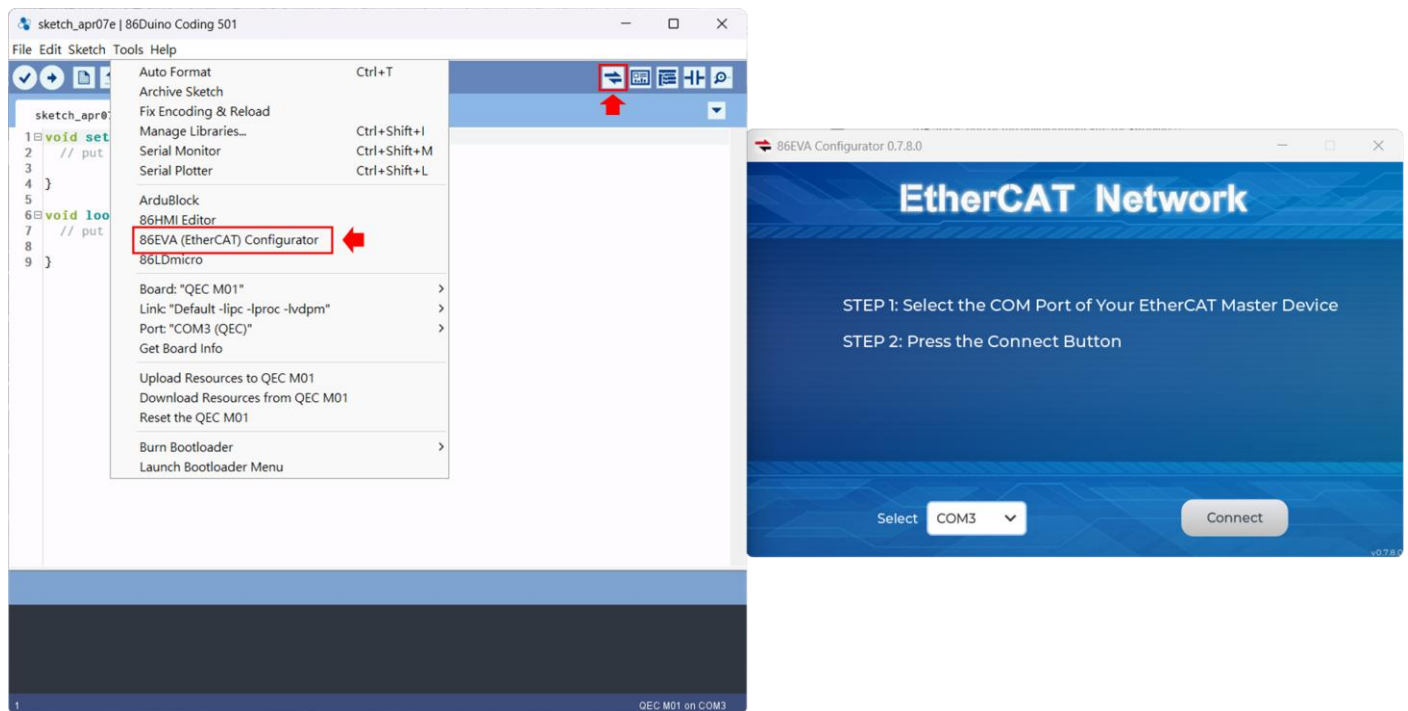

Please select the correct COM port and then click the "Connect" button.



Once you have confirmed that the correct COM port has been selected of QEC-M-01, press the Connect button to start scanning the EtherCAT network.



The connected devices will be displayed after the EtherCAT network has been scanned.



Step 2: Set the parameters

Press twice on the scanned device image to enter the corresponding parameter setting screen.

QEC-M-01


Press twice on the image of the QEC-M-01 to see the parameter settings.




The page will show the Object Name, BIOS Settings, Cycle Time, DC mode, ENI file, and Virtual Arduino configuration.

Please check the following configures.


1. Turn off the "Apply BIOS Settings".

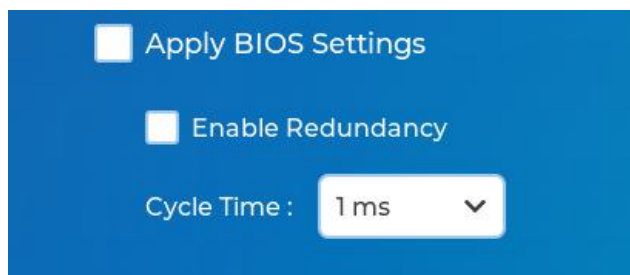

2. Select "1ms" to the Cycle Time.

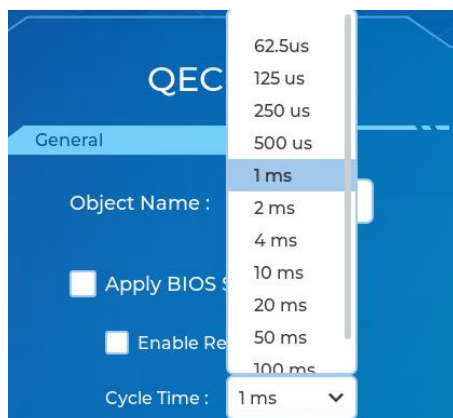

3. Turn on the "Enable DC Synchronization".

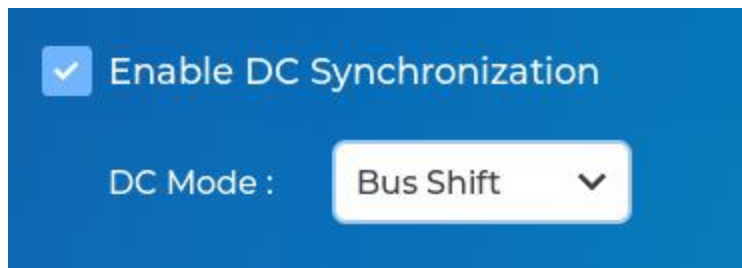


Click "Back" in the upper left corner to return.




AZD-KRED

Press twice on the image of the OrientalMotor AZD-KRED to see the parameter settings.

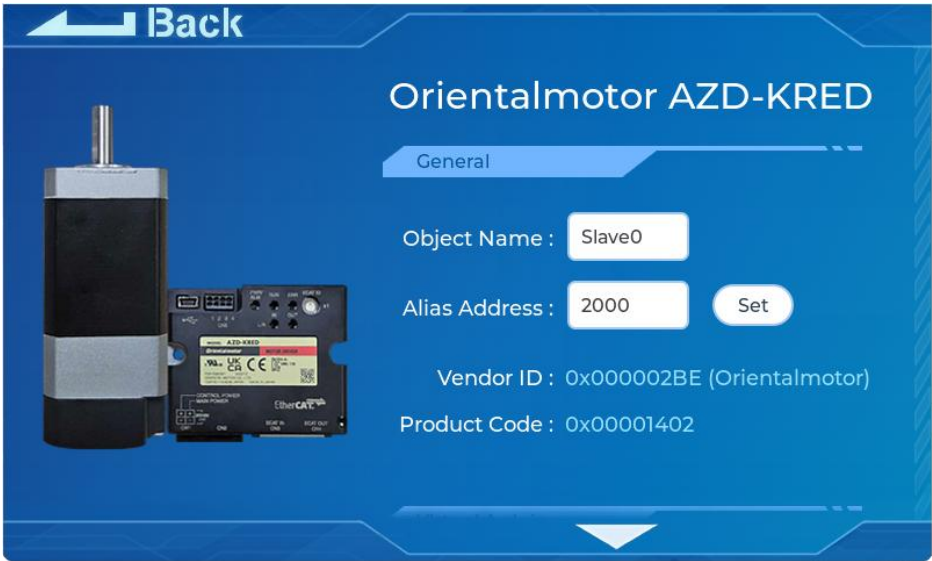


The page will show the Object Name, Alias Address, Vendor ID, and Product Code.

Please change the Object Name to "az_mini".
It'll appear a keyboard after you click the Object Name.

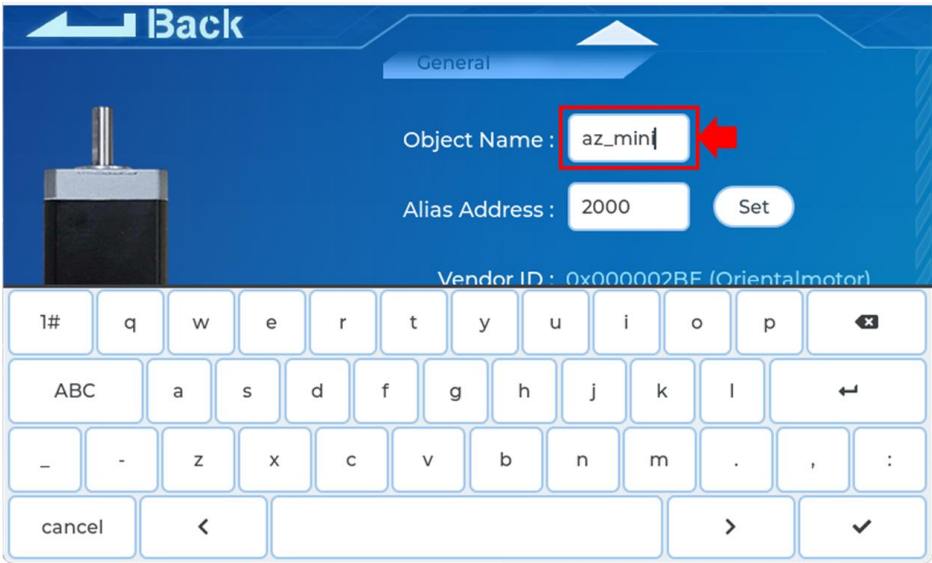


Click "Back" in the upper left corner to return.

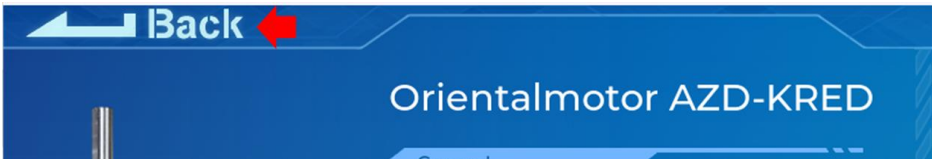


Step 3: Generate the code

Once you've set your device's parameters, go back to the home screen and press the "Code Generation" button in the bottom right corner.

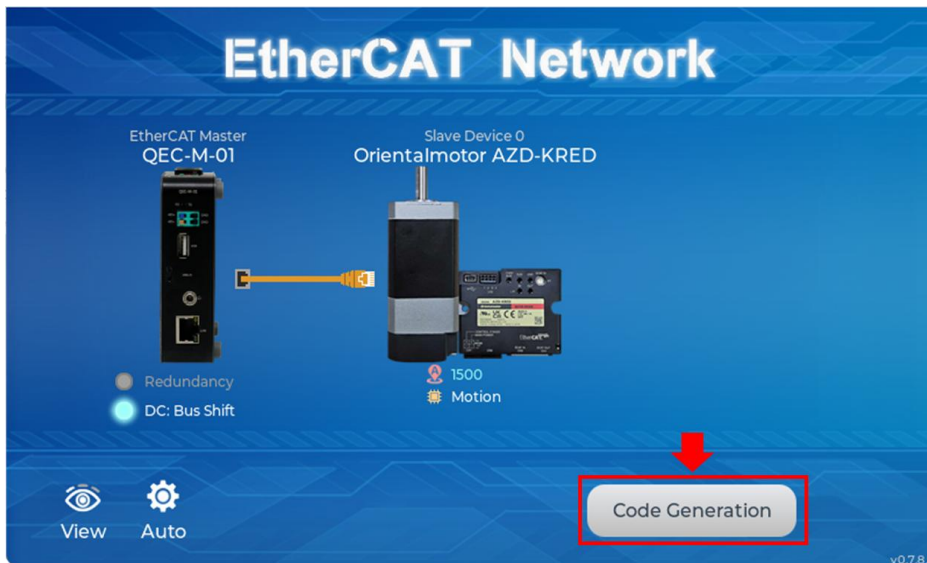


When you're done, double-click the OK button to turn off 86EVA, or it will close in 10 seconds.

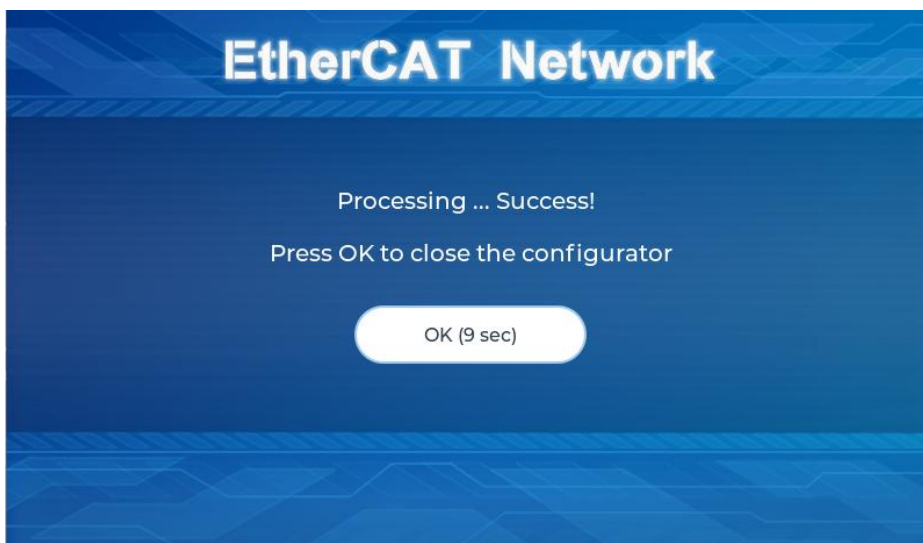

The generated code and files are as follows:

- sketch_sep10b: Main Project (.ino, depending on your project name)
- GPT.h: Parameters to provide to ChatGPT referred
- myeva.cpp: C++ program code of 86EVA
- myeva.h: Header file of 86EVA

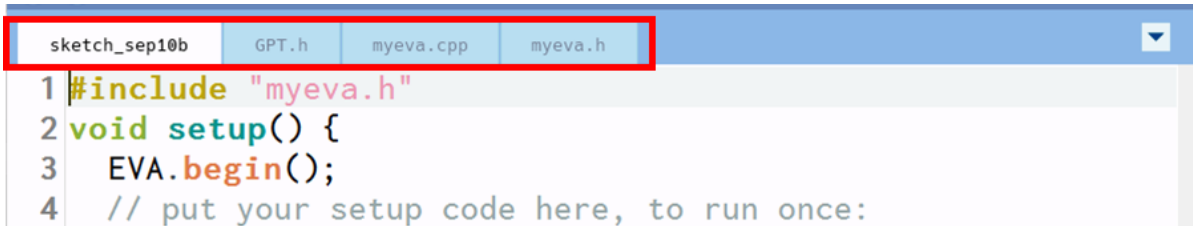

```
1 #include "myeva.h"
2 void setup() {
3   EVA.begin();
4   // put your setup code here, to run once:
```

Additional note: After 86EVA generates code, the following code will be automatically generated in the main program (.ino), and any of them missing will cause 86EVA not to work.

1. `#include "myeva.h"` : Include EVA Header file
2. `EVA.begin();` in `setup()` : Initialize the EVA function

Step 4: Write the code

The programming code from 86EVA are set as the following by default:

- OrientalMotor AZ-KRED: `EthercatDevice_CiA402` object.
- CiA402 mode: Profile Position (PP) mode.
- EtherCAT mode: `ECAT_SYNC`.

And here is the setting by users:

- EtherCAT Cycle time: 1 millisecond.
- Device Object Name: QEC-M-01 is "EcatMaster", and AZD-KRED is "az-mini".
- Distributed Clock: Open. Follow the cycle time.

1. In Setup Function:

- Initializes the serial (115200).
- Register Cyclic Callback Function, which named "EthercatCallback".
- Enable the AZ-mini. Change the CiA402 state to `CIA402_OPERATION_ENABLED`.
Configure Profile Parameters, setting motion Profile Type: Linear Ramp, Profile Velocity: 100,000, Acceleration: 100,000, Deceleration: 100,000.
Use `delay(1000)` to wait for it to change successfully.

2. In Callback Function:

The motor's actual position is read cyclically.

3. In Loop Function:

The main loop prints the motor's current position to the serial monitor.

It manages the Profile Position (PP) mode state machine. The motor moves to a specific position, waits for the target to be reached, and then reverses back to the starting position:

- State 0: Move to a target position (100,000 units).
- State 1: Waits for the motor to reach the target position. Once the target is reached, proceed to the next state.
- State 2: Move to another target position (-100,000 units).
- State 3: Waits for the motor to reach the target position. Once the target is reached, reset the state machine to State 0 to repeat the cycle.

Each state introduces a delay of 100 milliseconds to ensure smooth transitions.

In summary, this code establishes EtherCAT communication, reads the AZ-mini motor position, and controls the motor by updating its target position based on its operational state.

Here is the code:

```
#include "myeva.h"

int pp_state = 0, pos = 0;

void EthercatCallback(void) {
    pos = az_mini.driveGetPositionActualValue();
}

void setup() {
    Serial.begin(115200);
    EVA.begin();

    Serial.print("Enable: "); Serial.println(az_mini.enable());
    az_mini.pp_SetMotionProfileType(0);
    az_mini.pp_SetVelocity(100000);
    az_mini.pp_SetAcceleration(100000);
    az_mini.pp_SetDeceleration(100000);
    delay(1000);
}

void loop() {
    Serial.print("Pos: "); Serial.println(pos);



    switch (pp_state) {
        case 0:
            if (az_mini.pp_Run(100000) == 0)
                pp_state++;
            break;
        case 1:
            if (az_mini.driveIsTargetReached())
                pp_state++;
            break;
        case 2:
            if (az_mini.pp_Run(-100000) == 0)
                pp_state++;
            break;
        case 3:
            if (az_mini.driveIsTargetReached())
                pp_state = 0;
            break;
    }
}
```

```


delay(100);
}

```


Note:

Once the code is written, click on the toolbar to  compile, and to confirm that the compilation is complete and error-free, you can click  to upload.

File Edit Sketch Tools Help

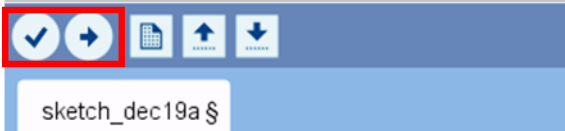

After you successfully upload the program to the QEC-M-01, you can open the Serial Monitor on 86Duino IDE. Please check the Serial baud rate is same as your setting.

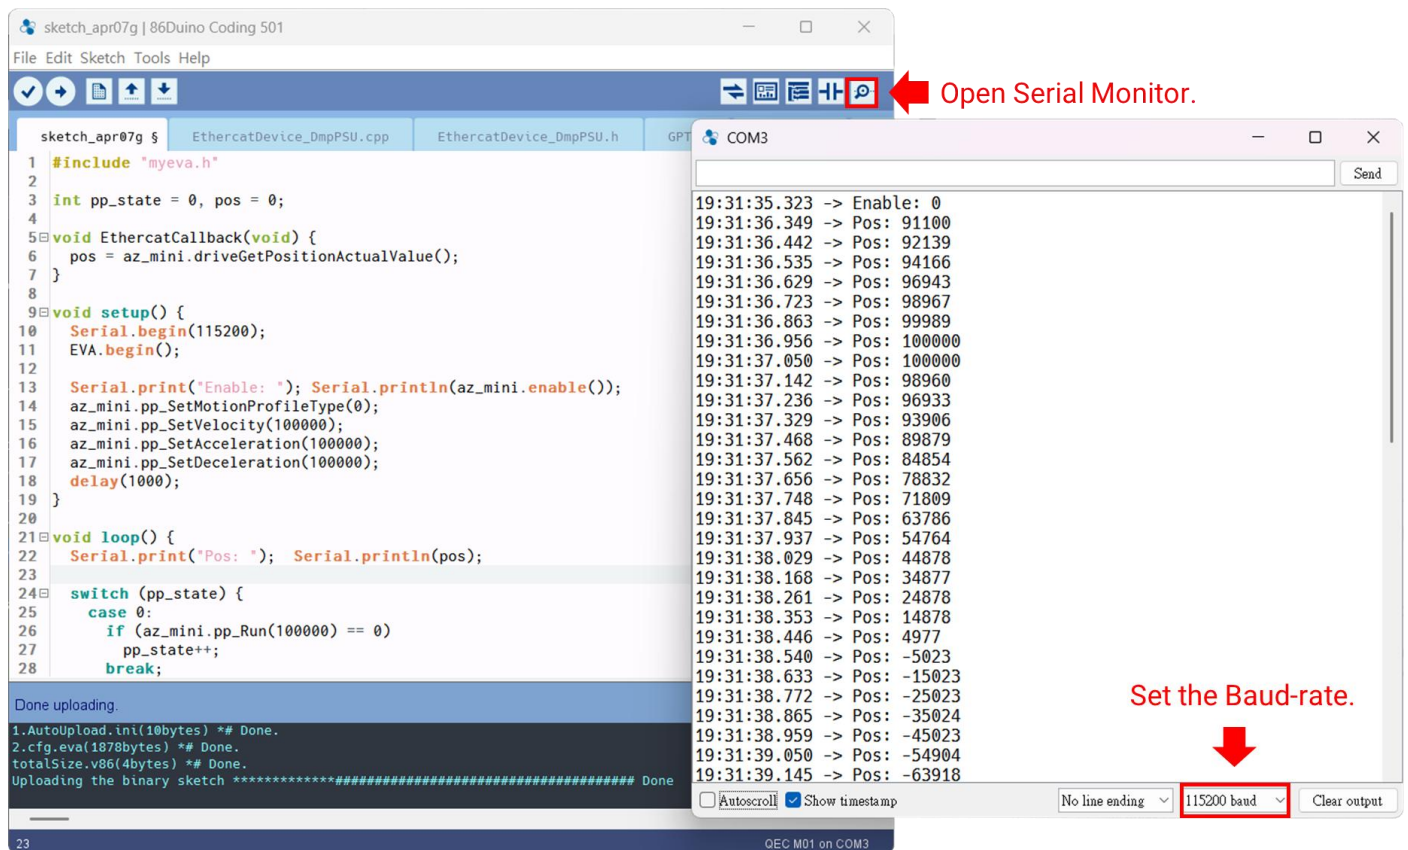

If the EtherCAT communication config successful, Serial Monitor will print "Enable: 0".



It will print the motor's current position to the serial monitor.

```
19:31:36.349 -> Pos: 91100
19:31:36.442 -> Pos: 92139
19:31:36.535 -> Pos: 94166
19:31:36.629 -> Pos: 96943
19:31:36.723 -> Pos: 98967
19:31:36.863 -> Pos: 99989
19:31:36.956 -> Pos: 100000
19:31:37.050 -> Pos: 100000
19:31:37.142 -> Pos: 98960
19:31:37.236 -> Pos: 96933
19:31:37.329 -> Pos: 93906
19:31:37.468 -> Pos: 89879
19:31:37.562 -> Pos: 84854
19:31:37.656 -> Pos: 78832
19:31:37.748 -> Pos: 71809
19:31:37.845 -> Pos: 63786
19:31:37.937 -> Pos: 54764
19:31:38.029 -> Pos: 44878
19:31:38.168 -> Pos: 34877
19:31:38.261 -> Pos: 24878
19:31:38.353 -> Pos: 14878
19:31:38.446 -> Pos: 4977
19:31:38.540 -> Pos: -5023
19:31:38.633 -> Pos: -15023
19:31:38.772 -> Pos: -25023
19:31:38.865 -> Pos: -35024
19:31:38.959 -> Pos: -45023
19:31:39.050 -> Pos: -54904
19:31:39.145 -> Pos: -63918
```

☐ Autoscroll☒ Show timestamp

No line ending ▾


115200 baud ▾

Clear output

Troubleshooting

QEC-M-01 cannot successfully upload code

When you are unable to successfully upload code, please open 86EVA to check if your QEC EtherCAT MDevice's environment is abnormal. As shown in the figure below, please try updating your QEC EtherCAT MDevice's environment, which will include the following three items: Bootloader, EtherCAT firmware, and EtherCAT tool.

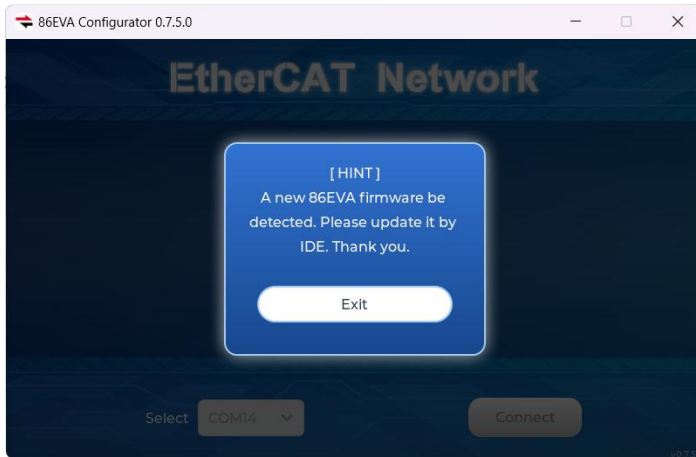

Now, we will further explain how to proceed with the update:


Step 1: Setting up QEC-M

1. Download and install 86Duino IDE 500 (or a newer version): You can download it from [Software](#).
2. Connect the QEC-M: Use a USB cable to connect the QEC-M to your computer.
3. Open 86Duino IDE: After the installation is complete, open the 86Duino IDE software.
4. Select Board: From the IDE menu, choose "Tools" > "Board" > "QEC-M-01" (or the specific model of QEC-M you are using).
5. Select Port: From the IDE menu, choose "Tools" > "Port" and select the USB port to which the QEC-M is connected.


Step 2: Click “Burn Bootloader” button

After connecting to your QEC-M product, go to “Tools”> “Burn Bootloader”. The currently selected QEC-M name will appear. Clicking on it will start the update process, which will take approximately 5-20 minutes.

QEC-M-01:

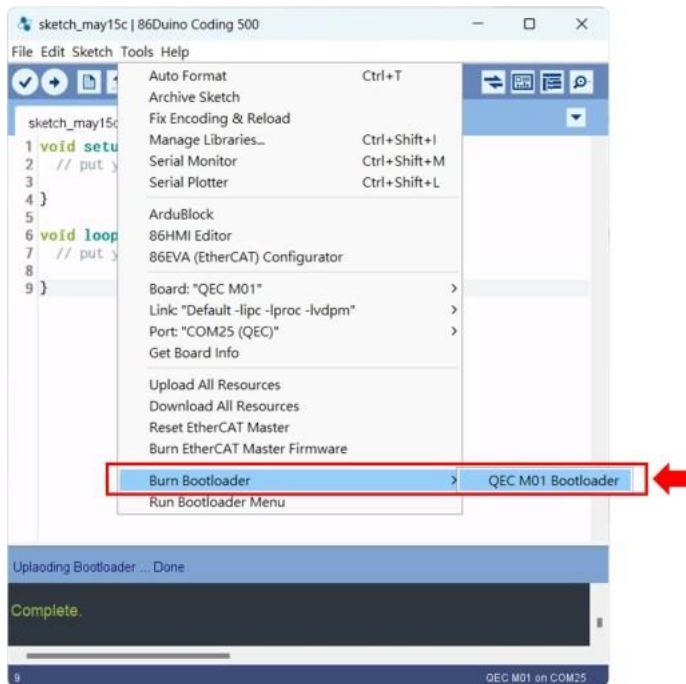

Step 3: Complete the Update

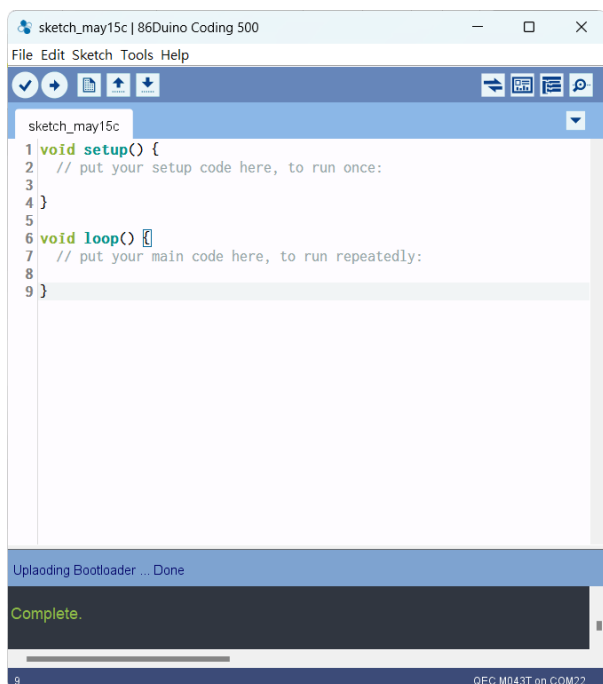

After completing the above steps, your QEC-M has been successfully updated to the latest version of the development environment.

Warranty

This product is warranted to be in good working order for a period of one year from the date of purchase. Should this product fail to be in good working order at any time during this period, we will, at our option, replace or repair it at no additional charge except as set forth in the following terms. This warranty does not apply to products damaged by misuse, modifications, accident or disaster. Vendor assumes no liability for any damages, lost profits, lost savings or any other incidental or consequential damage resulting from the use, misuse of, originality to use this product. Vendor will not be liable for any claim made by any other related party. Return authorization must be obtained from the vendor before returned merchandise will be accepted. Authorization can be obtained by calling or faxing the vendor and requesting a Return Merchandise Authorization (RMA) number. Returned goods should always be accompanied by a clear problem description.

All Trademarks appearing in this manuscript are registered trademark of their respective owners. All Specifications are subject to change without notice.

©ICOP Technology Inc. 2025